





Quick Start Guide

1 – User Interface Transmitter

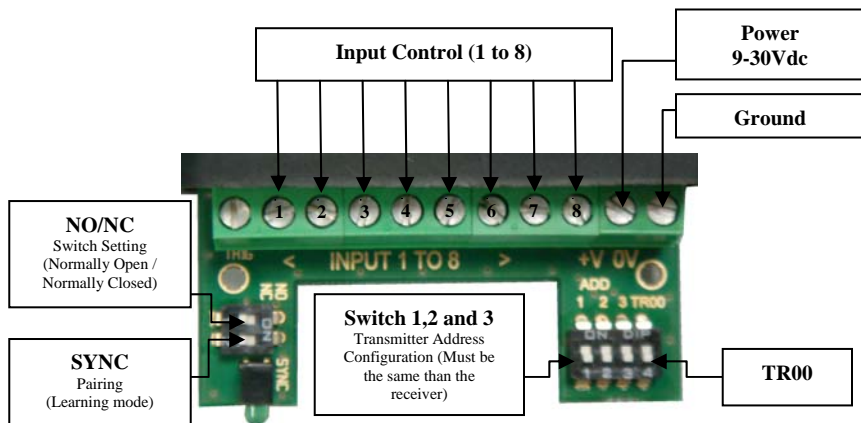

2- User Interface Receiver

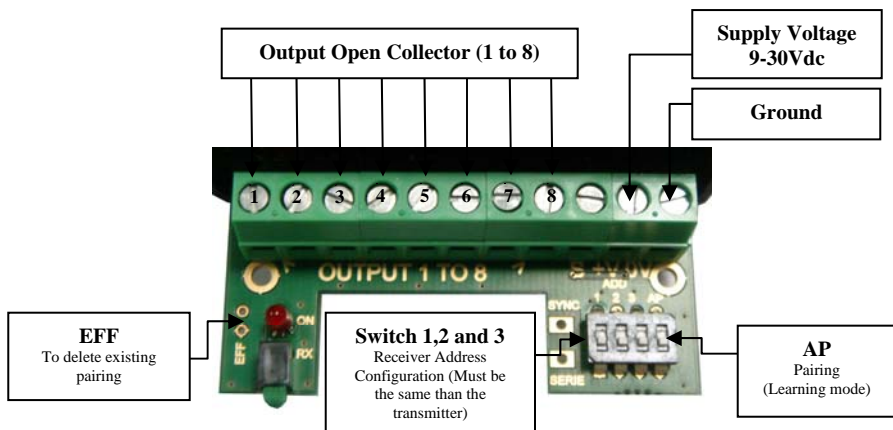

3- Learning Procedure

All the switches must be put on OFF position.

- **Leds Status in starting product**
 - o [Transmitter] Green Led ON
 - o [Receiver] Red Led BLINKING (twice per sec)

If a learning process has already been done on the product, the red led is ON and the green one blinks quickly on the receiver.

A new learning process can be done without problem.

- **On the receiver → Put the switch AP to ON**
 - o [Receiver] The red led is blinking (once per sec)
- **On the transmitter → Put the switch SYNC to ON**
 - o [Receiver] → The green led blinking quickly and becomes ON
 - o [Receiver] → The red led is blinking (twice per sec)
- **On the receiver → Put the switch AP to OFF**
 - o [Receiver] → The red led is ON
 - o [Receiver] → The green led is blinking quickly

The pairing can be deleted by a short-circuit during 2 seconds between the two « EFF » tests points when turning ON the product.

4- Leds Status

Transmitter	Green Led status	Comment
	OFF	Product Power off
	ON	Product Power on

Receiver	Green Led status	Red led status	Comment
	OFF	OFF	Product Power off
	OFF	BLINK 2x/sec	Product not configured (unpaired)
	OFF	BLINK 1x/sec	Product in learning mode (pairing)
	ON	FAST BLINK	Product configured and working